

---

# Parts Counting

The counting parameter must be enabled before the quantity mode is available. Refer to page 24 for details on the counting parameter and page 15 to enter the setup mode, make changes and save the change.

To sample using selectable fixed counts:

1. Press **[SAMPLE/Enter]** to perform an auto-tare. The scale prompts to add 10 pieces.  
**DISPLAY READS ► Add ~ 10**
2. Press **[UNITS]** to toggle sample amounts between 5, 10, 20, 50 and 100.  
**DISPLAY READS ► Add ~ 20**
3. Add the pieces to be sampled and press **[SAMPLE/Enter]** to sample and display the current quantity.  
**DISPLAY READS ► 20**

To sample using variable counts:

1. Press **[SAMPLE/Enter]** to perform an auto-tare. The scale prompts to add 10 pieces.  
**DISPLAY READS ► Add ~ 10**
2. Add pieces, key in desired count (example: 36), then press **[SAMPLE/Enter]** to sample as 36 pieces and display the current quantity.  
**DISPLAY READS ► Add ~ 36**